

Dura-Flex® Couplings

Installation Instructions

P-7891-TBW




 **TB Wood's®**
Altra Industrial Motion
TEKMATIC

Distribuidor exclusivo para la República Argentina
T. 011 4222 5040 - F. 011 4201 2478
www.tekmatic.com.ar - info@tekmatic.com.ar

⚠ WARNING Lock out / tag out the power source before proceeding to avoid unexpected starts. Failure to observe these precautions could result in bodily injury.

⚠ WARNING Coupling element may be thrown from the assembly with substantial force if subjected to a severe shock load.

⚠ CAUTION Check operating speed against Maximum RPM value in Table 1.



For a basic installation overview, scan the QR code below:



Scan to Watch Installation Video
or visit our Dura-Flex product page
at www.TBWoods.com

Further component information available:

Specification sheets, 3D models
ecatalog.TBWoods.com

Coupling Selection Program
www.TBWoods.com/Select

Installation / Alignment


Installation / Alignment Tools

- Hex key set
- Socket set
- Torque wrench
- Straight-edge
- Caliper
- Feeler gauge set

1. Inspect all coupling components and remove any protective coatings, lubricants, paint or rust from bores, mating surfaces and fasteners. Remove any existing burrs, etc. from the shafts.
2. Slide one hub onto each shaft using keys where required. (When using QD or Taper-Lock hubs, follow the instructions furnished with the Sure-Grip or Taper-Lock bushings.)
3. When high speed rings are to be used for spacer couplings, loosely install one ring on each half element.


4. Hold one half element on the hubs to determine the appropriate hub spacing. If using spacer elements with high speed rings, hold both half elements on hubs to make sure that the hubs do not interfere with the rings. The hub may be installed with the hub extension facing in or out. Make sure that the shaft extends into the hubs at least .8 times the shaft diameter.
5. Lightly fasten hubs to shafts to prevent them from moving during alignment.

Angular Alignment

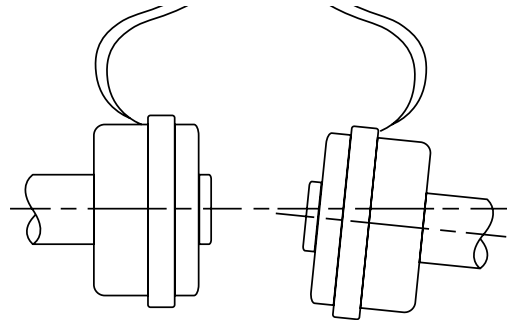

6. Angular Alignment: Without rotating the coupling, run a caliper around the hub and set the caliper to the widest point. Find the narrowest point with the caliper and feeler gauges. Reposition equipment until this value is as small as possible; reference Table 2 for maximum value/degree.

Parallel Alignment

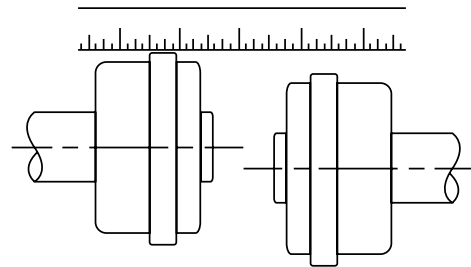

7. Parallel Alignment: Using the misalignment value from the previous step, look up the maximum allowable parallel misalignment using Table 2 and Figure 1. Without rotating the shafts, run a straight-edge around the hub and find the maximum offset with feeler gauges. If necessary, realign the shafts. Recheck parallel alignment.

8. Tighten motor and driven equipment fasteners to manufacturer specifications; recheck parallel and angular alignment.
9. When parallel and angular alignment values are within service ratings, verify that all set screws, cap screws and other fasteners are tightened to values in Table 1. Recheck parallel and angular alignment after tightening.

10. Install coupling guard per applicable safety regulations.
11. Periodically check alignment, as settling will often change equipment position.

Table 1 - Maximum RPM and Fastener Torque Values

Coupling Size	Maximum RPM		Element & Ring Cap Screws				BTS Hubs Set Screws			
			Imperial Elements		Metric Elements**		Imperial Hubs		Metric Hubs**	
	Standard	Spacer* (HS Rings)	Screw Size	ft-lb	Screw Size	Nm	Screw Size	ft-lb	Scw Size	Nm
WE2/WES2	7500	7500	1/4-20	17	M6-1	23	1/4-20	7	M6-1	6
WE3/WES3							5/16-18	14	M8-1.25	19
WE4/WES4										
WE5/WES5										
WE10/WES10							6600	4800(6600)	3/8-16	30
WE20/WES20	1/2-13	50	M10-1.5	32						
WE30/WES30										
WE40/WES40	5/8-11	100	M10-1.5	32						
WE50/WES50										
WE60/WES60	3800	2800(3800)	1/2-13	75	M12-1.75	100	3/4-10	167	M12-1.75	54
WE70/WES70							3/4-10	167	M12-1.75	54
WE80/WES80										

*Maximum spacer element RPM = Maximum standard element RPM if using high speed rings. HS rings come standard with sizes 2-10 and are available as an option for sizes 20-80.

**Metric elements and hubs use metric hardware and are denoted by "M" in the part number, e.g. WE2M, WES2M, WE2HM28MM.

Table 2 - Angular Inch Gap

Hub Size		Degrees			
		1°	2°	3°	4°
WE2	in	0.03	0.07	0.10	0.13
	mm	0.8	1.7	2.5	3.3
WE3	in	0.04	0.08	0.12	0.16
	mm	1.0	2.1	3.1	4.1
WE4	in	0.05	0.09	0.14	0.18
	mm	1.1	2.3	3.5	4.6
WE5	in	0.06	0.11	0.16	0.22
	mm	1.4	2.8	4.2	5.5
WE10	in	0.06	0.13	0.19	0.22
	mm	1.6	3.2	4.9	5.5
WE20	in	0.08	0.16	0.23	
	mm	2.0	4.0	5.9	
WE30	in	0.10	0.19	0.28	
	mm	2.4	4.8	7.2	
WE40	in	0.12	0.23	0.35	
	mm	2.9	5.9	8.8	
WE50	in	0.14	0.28	0.43	
	mm	3.6	7.2	10.8	
WE60	in	0.15	0.31		
	mm	3.9	7.7		
WE70	in	0.16	0.32		
	mm	4.1	8.2		
WE80	in	0.20	0.39		
	mm	5.0	10.0		


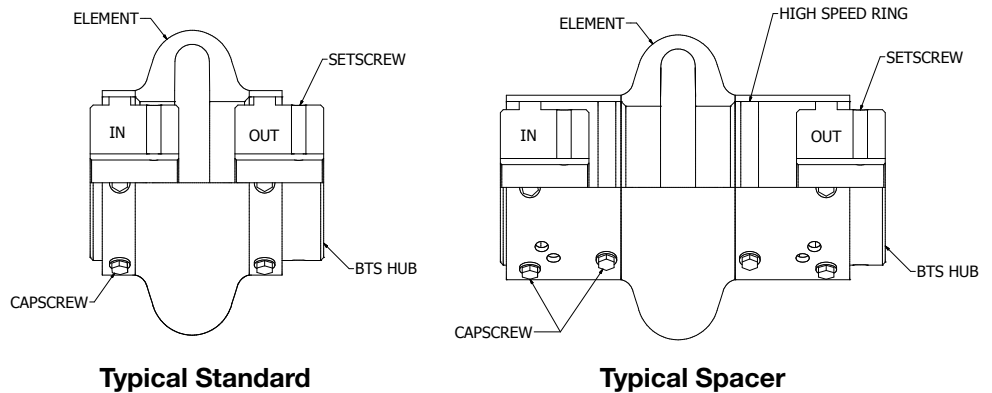


Figure 1 - Parallel Gap

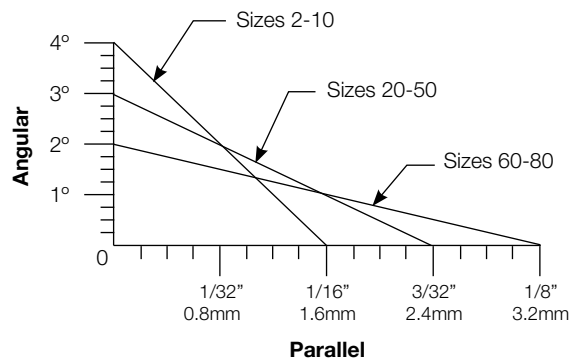

TB Wood's Facilities

North America

USA

440 North Fifth Avenue
Chambersburg, PA 17201 - USA
888-829-6637 * 717-264-7161
Belted Drives and Elastomeric Couplings

Customer Service
1-888-829-6637 (Press #5)

For Application Support
1-888-829-6637 (Press #7)

2000 Clovis Barker Road
San Marcos, TX 78666 - USA
1-888-449-9439
General Purpose Disc Couplings

Customer Service
1-888-449-9439

4970 Joule St
Reno, NV 89502 - USA
775-857-1800

Canada

9779 45 Ave NW
Edmonton, AB T6E 5V8 - Canada
+1 780-439-7979

6305 Danville Road
Mississauga, ON L5T 2H7 - Canada
1-800-829-6631

1073 Rue Bégin
Saint-Laurent, QC H4R 1V8 - Canada
+1 514-332-4812

Mexico

Comisión Federal de Electricidad 850,
Industrial San Luis,
San Luis, S.L.P., 78395 - Mexico
+52 444 137 1500

Europe

Merchant Drive, Hertford
Hertfordshire SG13 7BL - England
+44(0)1992 501900
Elastomeric Couplings

The Brands of Altra Motion

Couplings

Ameridrives
www.ameridrives.com

Bibby Turboflex
www.bibbyturboflex.com

Guardian Couplings
www.guardiancouplings.com

Huco
www.huco.com

Lamiflex Couplings
www.lamiflexcouplings.com

Stromag
www.stromag.com

TB Wood's
www.tbwoods.com

Linear Systems

Thomson
www.thomsonlinear.com

Warner Linear
www.warnerlinear.com

Geared Cam Limit Switches

Stromag
www.stromag.com

Engineered Bearing Assemblies

Kilian
www.kilianbearings.com

Electric Clutches & Brakes

Matrix
www.matrix-international.com

Stromag
www.stromag.com

Warner Electric
www.warnerelectric.com

Deltran
www.thomsonlinear.com

Belted Drives

TB Wood's
www.tbwoods.com

Heavy Duty Clutches & Brakes

Twiflex
www.twiflex.com

Stromag
www.stromag.com

Svendborg Brakes
www.svendborg-brakes.com

Wichita Clutch
www.wichitaclutch.com

Gearing & Specialty Components

Bauer Gear Motor
www.bauergears.com

Boston Gear
www.bostongear.com

Delevan
www.delevan.com

Delroyd Worm Gear
www.delroyd.com

Nuttall Gear
www.nuttallgear.com

Engine Braking Systems

Jacobs Vehicle Systems
www.jacobsvehiclesystems.com

Precision Motors & Automation

Kollmorgen
www.kollmorgen.com

Miniature Motors

Portescap
www.portescap.com

Overrunning Clutches

Formsprag Clutch
www.formsprag.com

Marland Clutch
www.marland.com

Stieber
www.stieberclutch.com

Neither the accuracy nor completeness of the information contained in this publication is guaranteed by the company and may be subject to change in its sole discretion. The operating and performance characteristics of these products may vary depending on the application, installation, operating conditions and environmental factors. The company's terms and conditions of sale can be viewed at <http://www.altramotion.com/terms-and-conditions/sales-terms-and-conditions>. These terms and conditions apply to any person who may buy, acquire or use a product referred to herein, including any person who buys from a licensed distributor of these branded products.

©2019 by TB Wood's LLC. All rights reserved. All trademarks in this publication are the sole and exclusive property of TB Wood's LLC or one of its affiliated companies.



www.tbwoods.com

2000 Clovis Barker Road
San Marcos, TX 78666
512-353-4000

P-7891-TBW 2/19



Distribuidor exclusivo para la República Argentina
T. 011 4222 5040 - F. 011 4201 2478
www.tekmatic.com.ar - info@tekmatic.com.ar